

Option 1: Using hanger bolt with t-nuts or mounting plates

1. Pre-drill hole in the bun foot slightly smaller than hanger bolt.

2. Start threading into bun foot by hand.

3. Thread two nuts on the machine threaded end.



4. Use a wrench or socket to fully seat wood threads into bun foot.



5. **Choosing your mounting preference:**


T-nut:

Drill hole to accommodate T-Nut. Then, pound it into hole with spikes toward the wood.



Mounting Plate:

Screw plate into furniture.

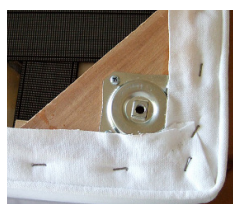

6. **Mounting your bun foot:**

T-Nut Mount:

Mounting Plate Mount:




Bun Foot Installation

Option 2: Using Screws

*Use a minimum of 3 screws, no smaller than #8 x 2" long.

1. Pre-drill the screw holes.

2. Drive screws through the cabinet into the bun foot.

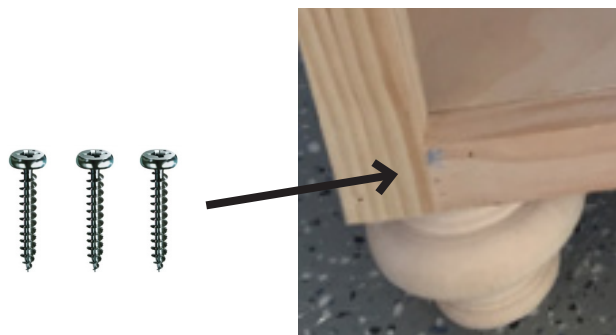

We would love to add your work to our gallery and social media. To be featured, email photos to rjacobs@brownwoodinc.com.

