



Hanging Corbels and Brackets on Drywall and Plaster - Not Recommended

For mounting to **drywall only**, use the toggle bolt indicated below.

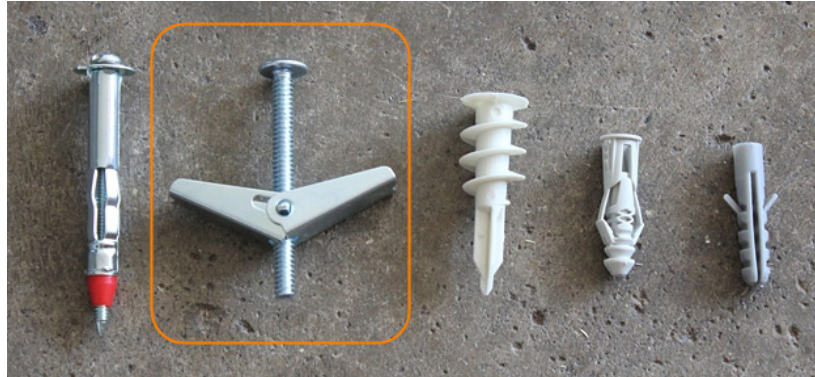

Drill hole large enough for the toggles to slip through then tighten leaving ¼" exposed.
Note: This method is not encouraged as the ability to hold weight will be diminished.

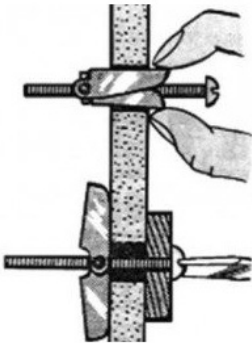

Be careful to not let bolt fall into wall by using a washer between toggle and bolt head.

We would love to add your work to our gallery and social media. To be featured, email photos to rjacobs@brownwoodinc.com.

Designs of Distinction[®] by Brown Wood, Inc.
7040 Lawndale Ave. Lincolnwood, IL 60712
800.328.5858
www.brownwoodinc.com

Follow us and share your photos!
@dodbybrownwood

